

Manual for dimensions & functions


Page - 1 -









Mod.: Aum-CA2

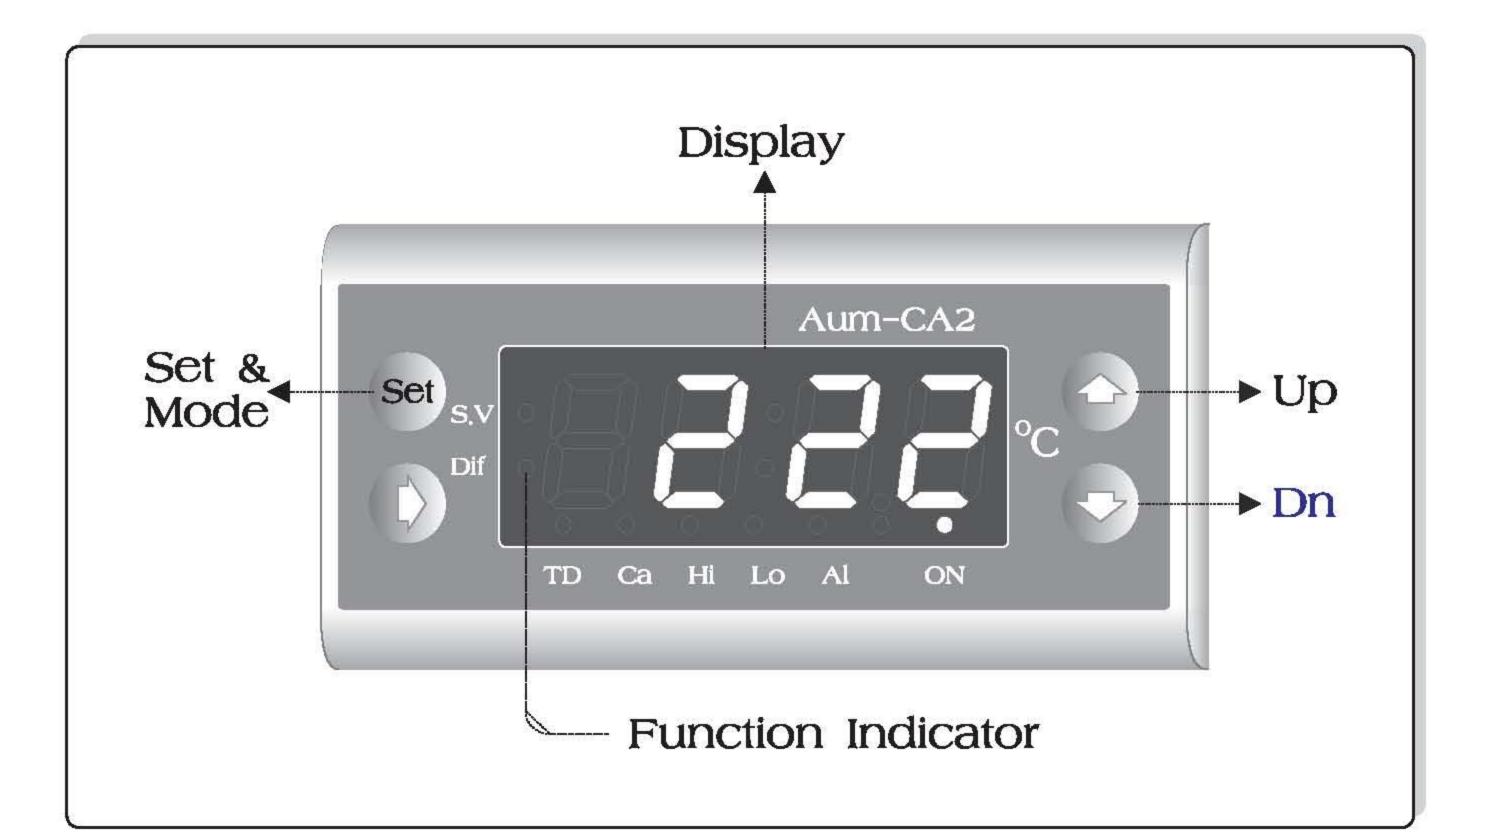

- *. Color: White
- *. Drilling Template: B::70.5xH::30.0xD::70.0mm

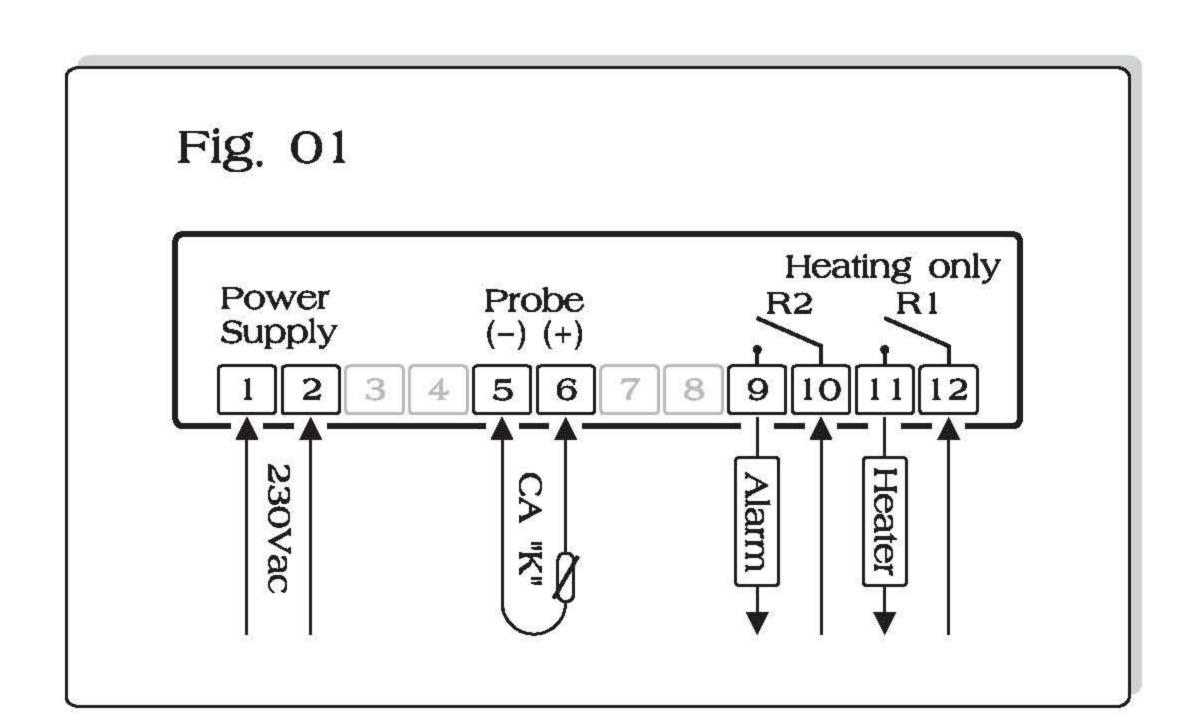

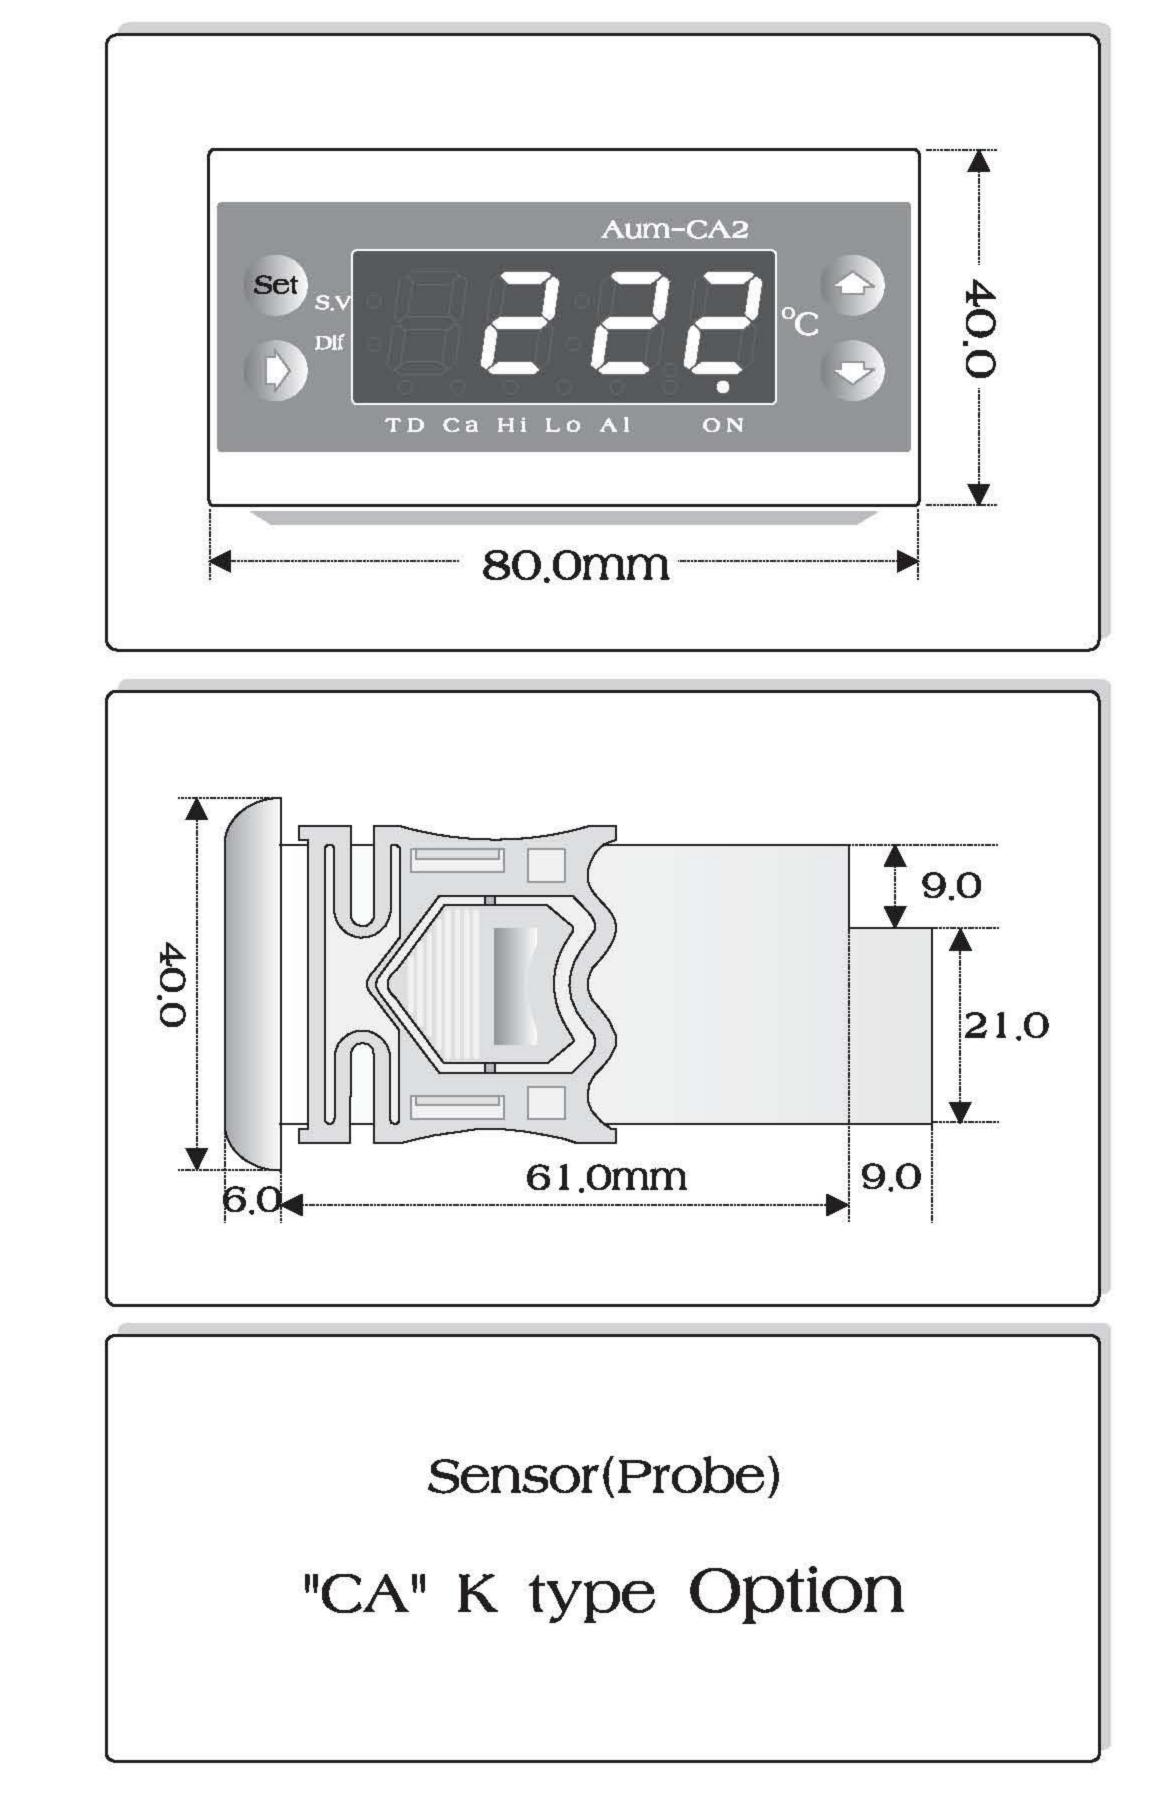

Please be sure to read and fully understand the notices before using it.

Model "Aum-ca2" is only for heating(max.1200°c). If high and low alarms are set, the range of the selection value of temperature is restricted. When it exceeds the value, it can be checked with alarm signal.

- When 230Vac power supply and a sensor are connected to it, the temperature detected on the sensor will be displayed on the display.
- Whenever "Set" key is pressed, the next function will be chosen. However, to set mode 3. Time Delay, press "Set" key and ">" key together.
- After selecting a function by "Set" key, set the desired value with "set" key and complete the setting by pressing "Set" key again. If not, the previous set value will be working continuously.
- The function indicator will blink while amending values by pressing "▲/▼" key. If 20 seconds pass after pressing "▲/▼" key, it will return to present temperature mode automatically.
- e.. If pressing " $\blacktriangle/\blacktriangledown$ " key repeatedly, the set value will be changed quickly.
 - If pressing "▲/▼" key one by one, the set value will be changed one by one.


Maxthermo-Gitta Group Corp.


Method of program loading





Page - 2 -

1: Selection V(SV)	a.	After confirming selection value by "Set" Key, set a desired valu
nge : 0~1200°C		with "▲/▼" key.
ply: Heater	b.	The range of setting is o < Selection Value+Dif. Value+Ca. < 1200°C

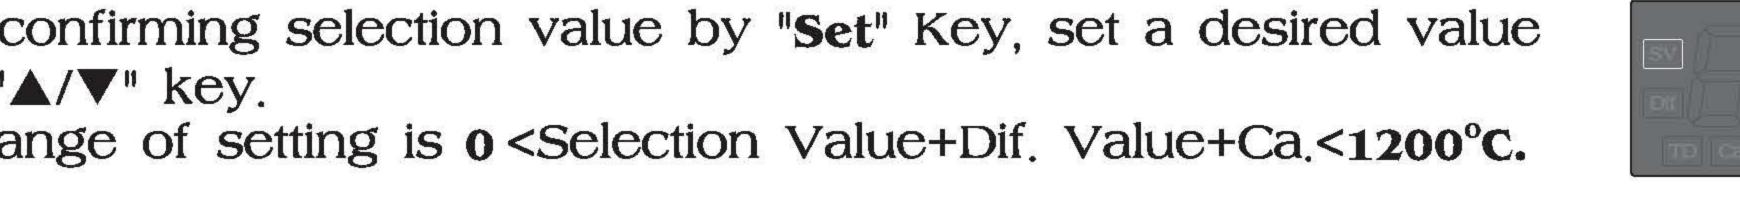

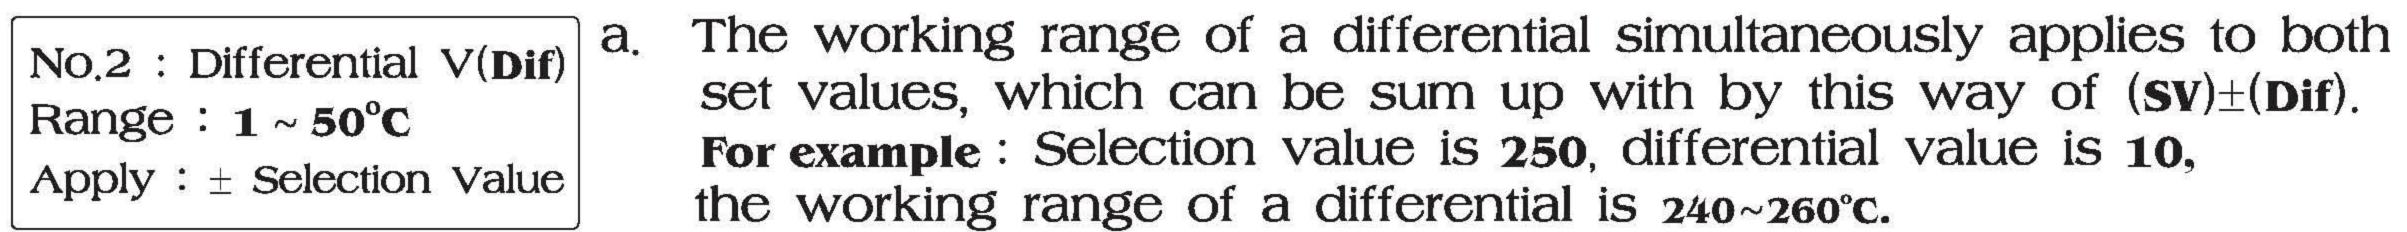

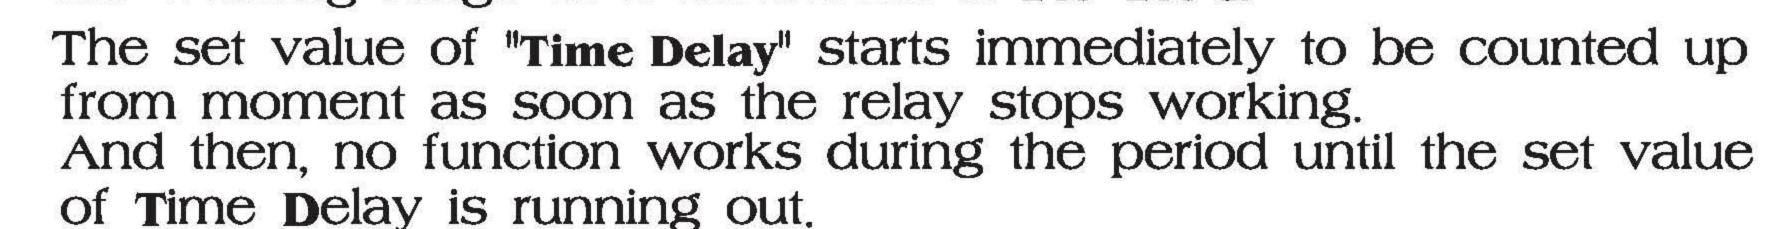

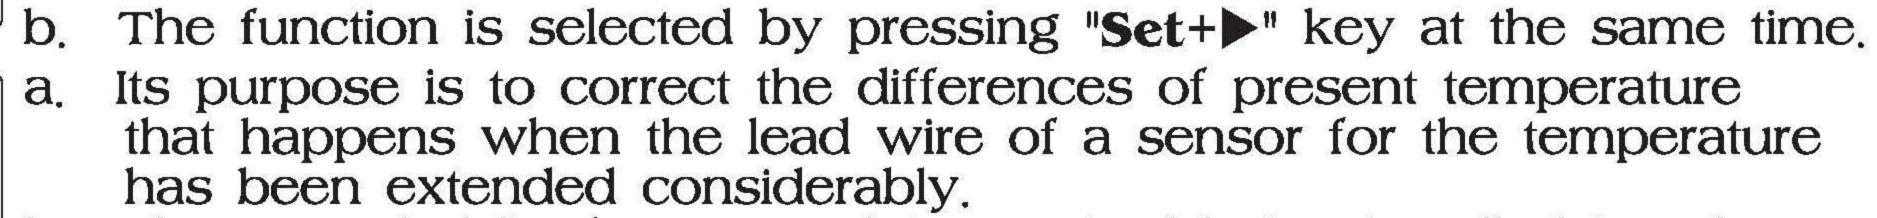

The extended line(Shield Wire) is required being installed in a long Apply: +/- Present Temp. b. distance and keep it away from a generator of an electrical noise.

If present temperature exceeds the high limit, No.2 Relay for alarm No.5: High Alarm(Hi) will work and the alarm lamp will turn on the display window. Range : **SV** ~ **1200°C** "Selection Value" of mode is restricted less then the set highest Apply: Alarm, Lock limit(Lock function).

limit(Lock function).

a. If present temperature exceeds the low limit, No.2 Relay for alarm will work and the alarm lamp will turn on the display window. "Selection Value" of mode is restricted less then the set lowest

There are two alarm signals, alert(continueously) and flick(Short). After selecting al:FL by pressing "A" key and al:AL by pressing "▼" key, complete the setting by pressing "Set" key.



Mod.: Aum-CA2










*. All specifications are subject to change without notice.

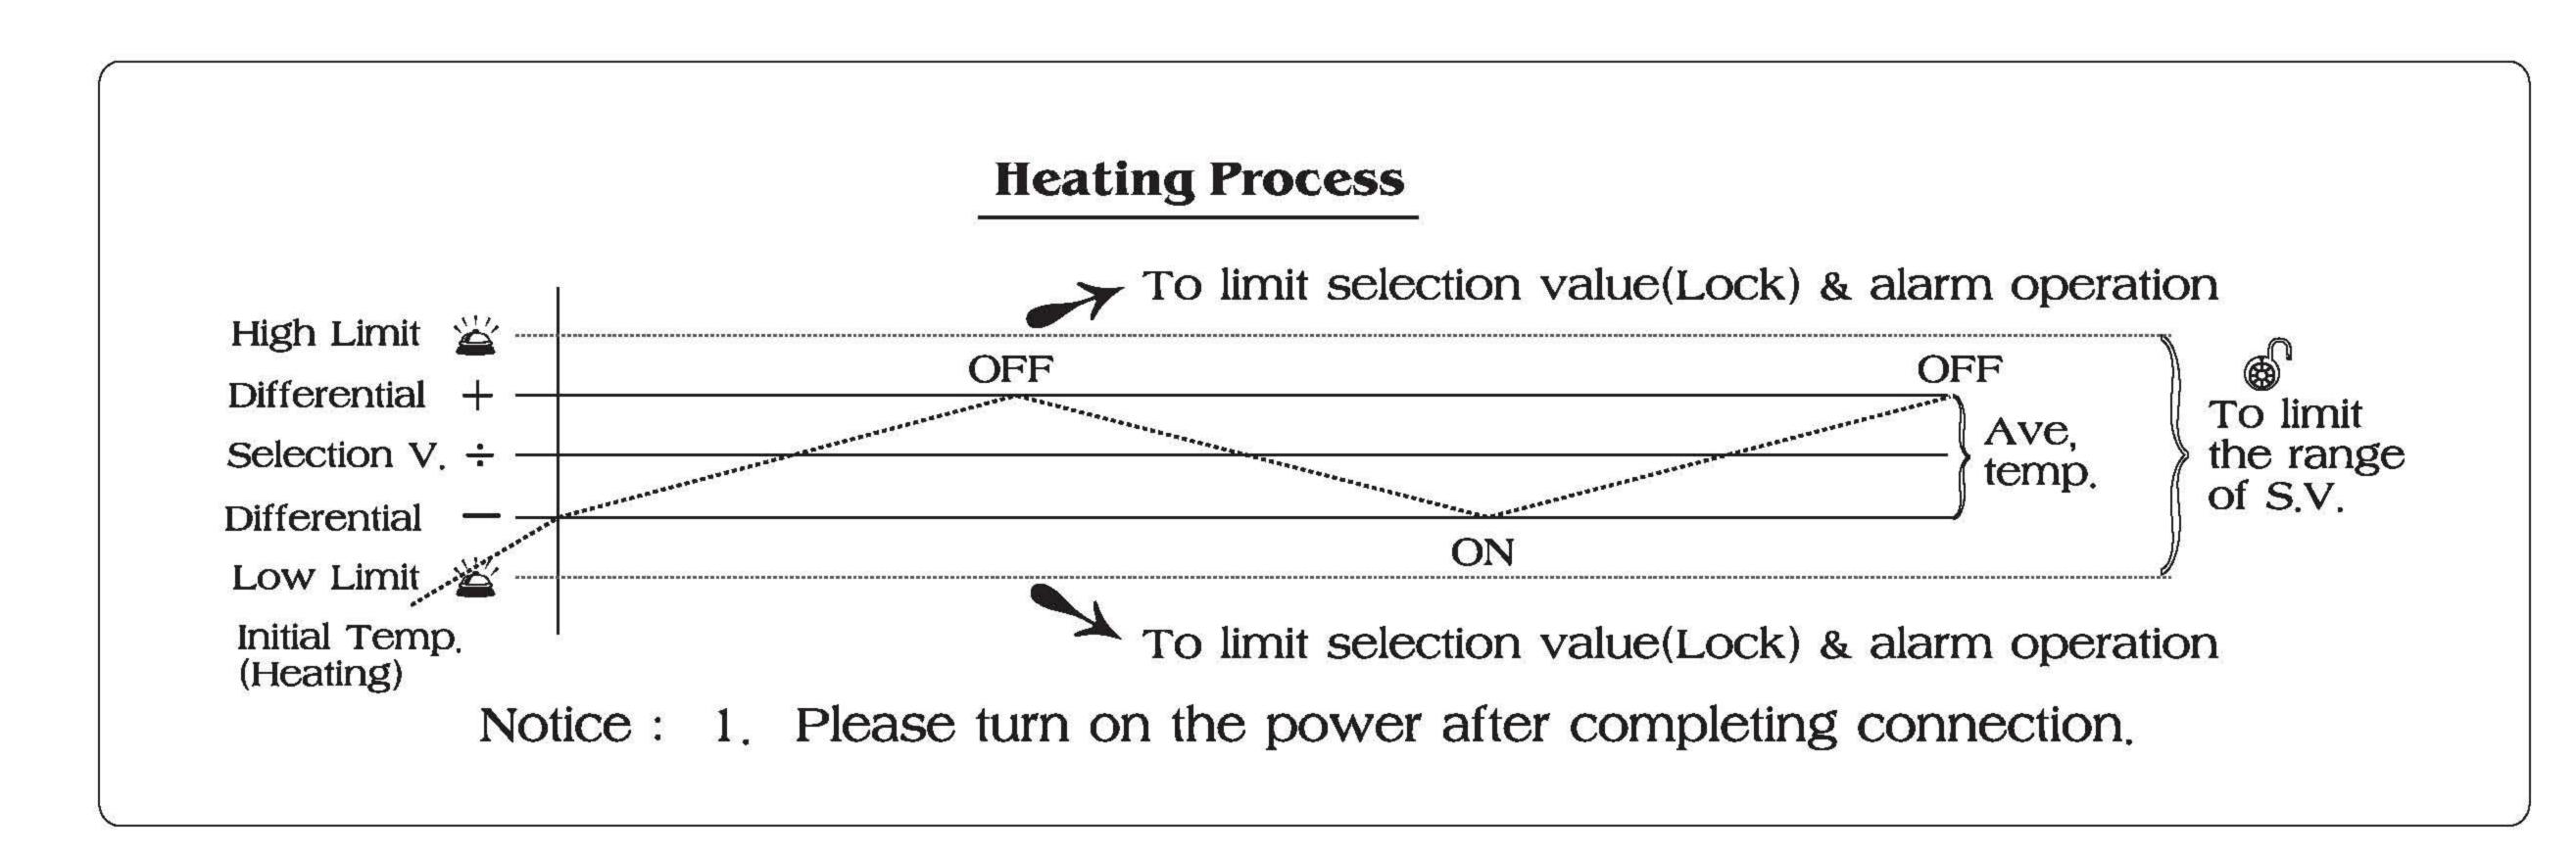

Cautions in use

No.3: Time Delay(TD)

Range: 0~15:00min.

No.4 : Calibration(Ca)

No.6: Low Alarm(Lo)

Apply: Alarm, Lock

No.7: Signal Sound

Range: AL:AL/AL:FL

Apply: Alarm signal

Range: 0 ~ sv.

Range : +/- 50°C

Apply: Heater

- Please avoid excessive rising of temperature, humidity and impact.
- Mod.: Aum-CA2
- 2. Please it upright to prevent water droplet at the end part of sensor.
- CA sensor ◀ 3. Keep it away from high voltage device or power generator and motor. Relay2(Alarm) ◀
- 4. Please wait for 5 seconds to turning it on again to avoid electric impact.
- 5. Use it between 0~60°C in temperature, 60% humidity around the controllers.
- 6. Please install in safe from strong acids, alkalis, oil, dust & direct rays of sun.
- 7. Please set safe protection at the double circuit when using at expensive appliances (Freezer, Heater and motor).

Maxthermo-Gitta Group Corp.