


Manual for dimensions & functions

Page - 1 -






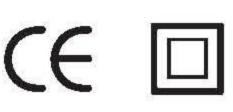


ISO INNOBIZ


Mod.: Aum-KNA

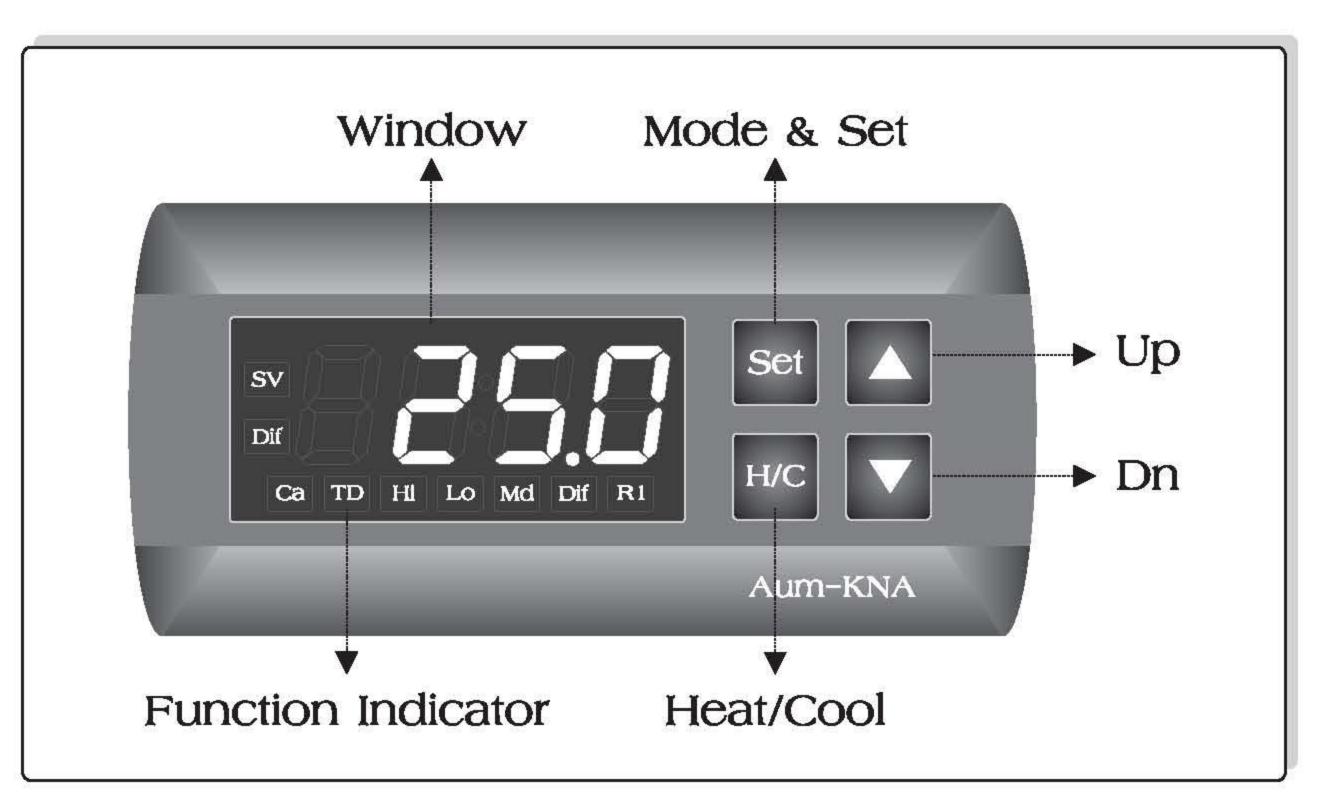


- Color: Black
- Drilling Template: B.:70,5xH.:30,0xD.:60,0mm

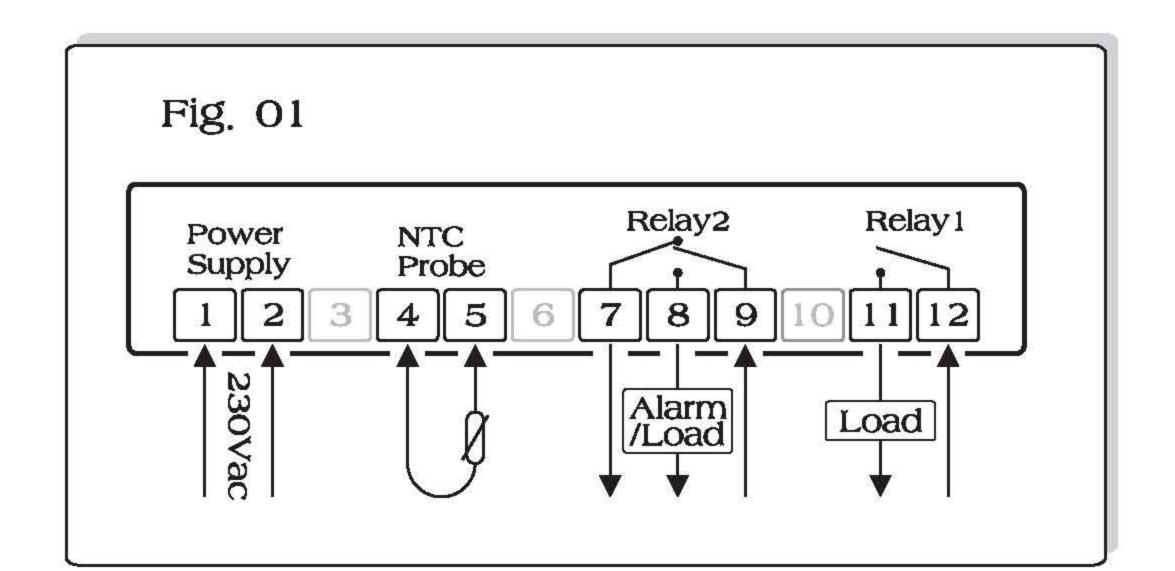



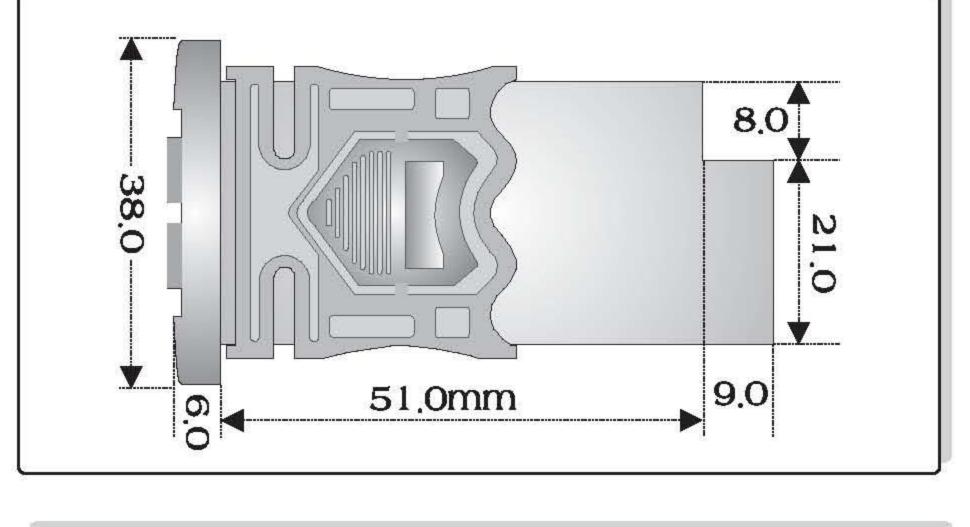

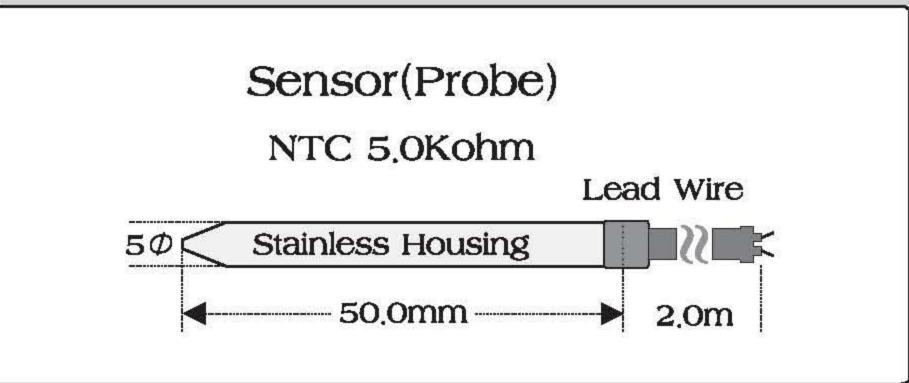

Please be sure to read and fully understand the notices before using it.

At Model "Aum-KNA", you can choose Heating or Cooling. Aum-KNA has two outputs, Relay1+Relay2. The Relay2 can be used as either Alarm or Load(Heater/Cooler).

- a. When "Aum-KNA" is connected to 230Vac power and a sensor is connected and switched on, the actual temperature detected will be shown on its window.
- b. Whenever "Set" key is pressed, the next function will be chosen(Selection Value ⇒ Differential Value ⇒ Calibration ⇒ Time Delay ⇒ High Alarm ⇒ Low Alarm ⇒ Alarm mode ⇒ Alarm Differential Value). However, "Calibration" can be selected by pressing "Set" and "H/C" key at the same time.
- c. After selecting a function by "**Set**" key, revise the values by pressing "▲/▼" key. Then, press "Set" key again to complete the setting. If 20 minutes pass after the setting, the present temperature will be displayed on the window automatically. Or, if you press continuously up to the end of all modes, the present temperature will be displayed. When you press "▲/▼" key in the function to be adjusted, the mode is blinking on the window.
- d. When changing the mode of "Heat/Cool". Pressing the "H/C" key for 5 seconds "HEAt/Cool" will be displayed on FND by "▲/▼" and "H/C" key same time. The HEAt/COOL functions will be chosen in the reverse order.
- e. When the temperature sensor is disconnected or short, "-Lo-/-Hi-" will be displayed on the window.
- f. The relay(5A/250Vac) is for signals only. It should not exceed 100w/230Vac.
 - *. All specifications are subject to change without notice.

Maxthermo-Gitta Group Corp.




Method of program loading

Mod.: Aum-KNA Page - 2 -Select a function with "Set" key & set the value by pressing "▲/▼" No.1: Selection V.(SV) 25.0 key. Then, "Set" key must be pressed to finalize the new setting. Range: -20.0~99.9°C Apply: Heater/Cooler Selection Value is as follows: -20.0° C <(S,V)+(Dif)+(Ca)< 99.9° C. The **Dif**ferential value is as follows: No.2: Differential V.(Dif) For heating, if the "SV" 25.0, "Dif" 2.0, the working range will be Range : $0.1 \sim 12.7^{\circ}C$ within 23.0~25.0°C. For cooling, if the "SV" 25.0, "Dif" 2.0 the working Apply: ± Select'n Value range will be 25.0~27.0°C. a. The purpose of this function is to calibrate the differences in present temp, that happen when the lead wire of sensor has been extended No.3 : Calibration(Ca) considerably. Keep the lead(Shield) wire of sensor away from a Range: $0.0 \sim +/-6.3$ °C powerful generator or an electrical noise. Apply: +/-Present Temp. b. Press "set+H/C" key at the same time to select this function. This function protects a machine from damage that can be resulted from frequent stops and restarts by delaying the operation of a No.4: Time Delay(TD) relay during the set value. The relay won't operate for the set Range: 00:00~15:00(m:s) value of Time Delay from the time of "OFF" of the relay. Apply: R1 "OFF" ▶ Delay b. It protects a machine from the chattering due to noise. a. If the present temperature exceeds the highest limit, the high alarm indicator "-Hi-" on the display window is turned on and Relay2 No.5: High Alarm & Lock 999 for alarm will work according to No.7 Alarm mode. Range: **S.V.** < **99.9°C** The setting range of High alarm value should be set higher the Apply: Alarm / Load No.1 Selection value. a. If the present temperature exceeds the lowest limit, the low alarm indicator "-Lo-" on the display window is turned on and Relay2 No.6: Low Alarm & Lock for alarm will work according to No.7 Alarm mode. Range: -20.0 < S.V. The setting range of Low alarm value should be set lower the Apply: Alarm / Load No.1 Selection value. There are two different signals with regard to the function of alarm. Range: AL:ALert/AL:FLick
Apply: Load / Alarm

One is a state of "Alert"=Continuity/"FLick"=Flash(R2 Diff. 0.0°C).

The mode of "AL:FL" is only applicable for buzzer. The other mode of "AL:AL" can only be applied to an auxiliary machine. No.7: Alarm mode c. Press "▲" key to choose "AL:FL", press "▼" key to choose "AL:AL". The set value of the "Dif"(R2) applies to alarm (High+Dif.)/(Low-Dif.). No.8: R2 Differential(Dif) b. If you want to operate an auxiliary machine(Heater/Cooler) instead of alarm, the differential value should be set to protect the machine. Range: 0.0 ~ 12.7°C

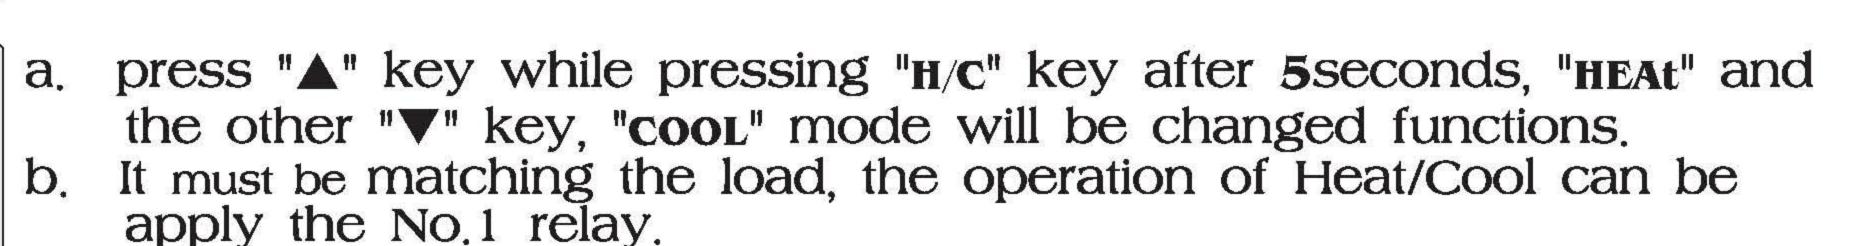



Mod.: Aum-KNA

Alarm **←**



Cautions in use

Apply: High(+), Low(-)

H/C + ▲/▼ Convert

Range: HEAt/COOL

Apply: Relay1

Please avoid excessive rising of temperature, humidity and impact.

2. Please it upright to prevent water droplet at the end part of sensor. NTC Sensor ←

At this time, No.7 should be AL:AL.

3. Keep it away from high voltage device or power generator and motor.

4. Please wait for 5 seconds to turning it on again to avoid electric impact.

5. Use it between 0~60°C in temperature, 60% humidity around the controllers.

6. Please install in safe from strong acids, alkalis, oil, dust & direct rays of sun. 7. Please set safe protection at the double circuit when using at expensive appliances (Freezer, Heater and motor).

Maxthermo-Gitta Group Corp.